 


FAIR-PLAY

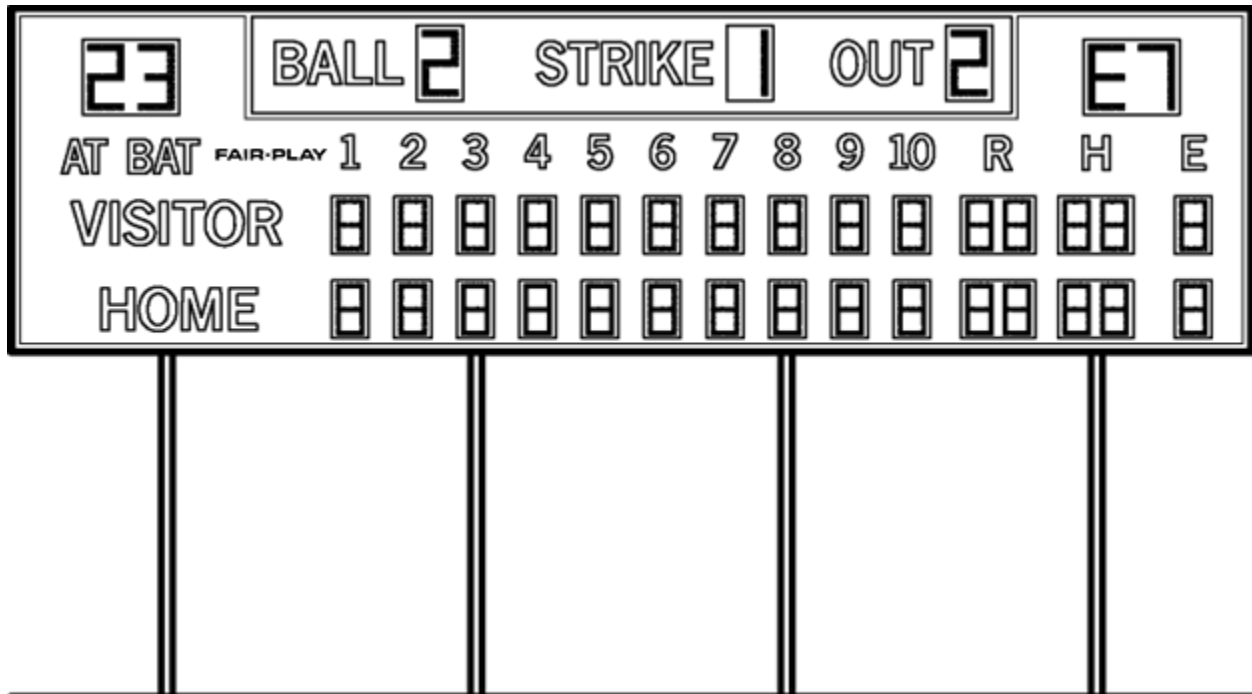

A0113

OUTDOOR

LED SCOREBOARD CARE & OPERATIONS MANUAL

98-0000-11 • REV 2026.04.09

DISCLAIMER

This publication is not a service manual. There are no user-serviceable components. If you require service, please contact your authorized Fair-Play dealer, service representative, or Fair-Play Help Desk.

SERVICE & CUSTOMER INFORMATION

- For product support or to view the knowledge base please visit www.fairplay.zohodesk.com
- Customers must have part numbers when ordering items through the service department.
- To aid you in your discussions with service representatives, we suggest that you record or have the following information:

MODEL: _____ <i>(Found on the right side of the scoreboard — see ID Label on page 3)</i>	BOARD TYPE: _____ <i>(Refer to control user manual)</i>
SALES ORDER: _____ <i>(This number is found on the upper right hand corner of the packing slip, invoice, or near the ID Label)</i>	
INSTALLATION DATE: _____	
DEALER INFORMATION	
Dealer: _____	
Contact: _____	
Website: _____	
Email: _____	Second Email: _____
Main Number: _____	Direct Number: _____
Address: _____	

- If further help is needed — contact your authorized Fair-Play dealer, service representative, or phone the Fair-Play Help Desk at:
 - Toll-free phone**(800) 462-2716**
 - Support Portal**support.fair-play.com**
 - Website**fair-play.com**

COPYRIGHT

This document contains Fair-Play Corporation proprietary information. Any disclosure, use, or duplication of the document or of any information contained therein for other than the specific purpose for which it was disclosed is expressly prohibited, except as may be otherwise agreed to in writing. Copyright © 2026.

COMPONENT LABELS

ID LABEL

The **model number** is found on the ID Label located on the side of the scoreboard. Refer to Figure 1 on this page.

Note: The **model number** is cross-referenced in the control user manual to a **board type**. The **board type** is then programmed into the **control** to run the **scoreboard**. Please refer to the control user manual for additional information.

SALES ORDER LABEL

The sales order numbers are required for service and warranty purposes. The sales order labels are located on various places on the scoreboard:

- On the side of the scoreboard, with the ID label and
- On the inside the scoreboard — on or near the major components.

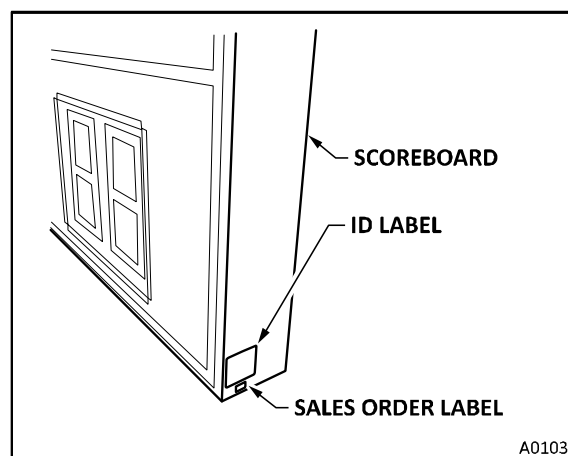 


Figure 1 — ID and Sales Order Labels

DIAGRAMS, LABELS AND PART NUMBERS

Behind the main access panel, the general locations of the major components are shown in Figure 2 below. Additional information such as part numbers, component names, connection notes, jumper settings and diagrams are also provided on or near the components.

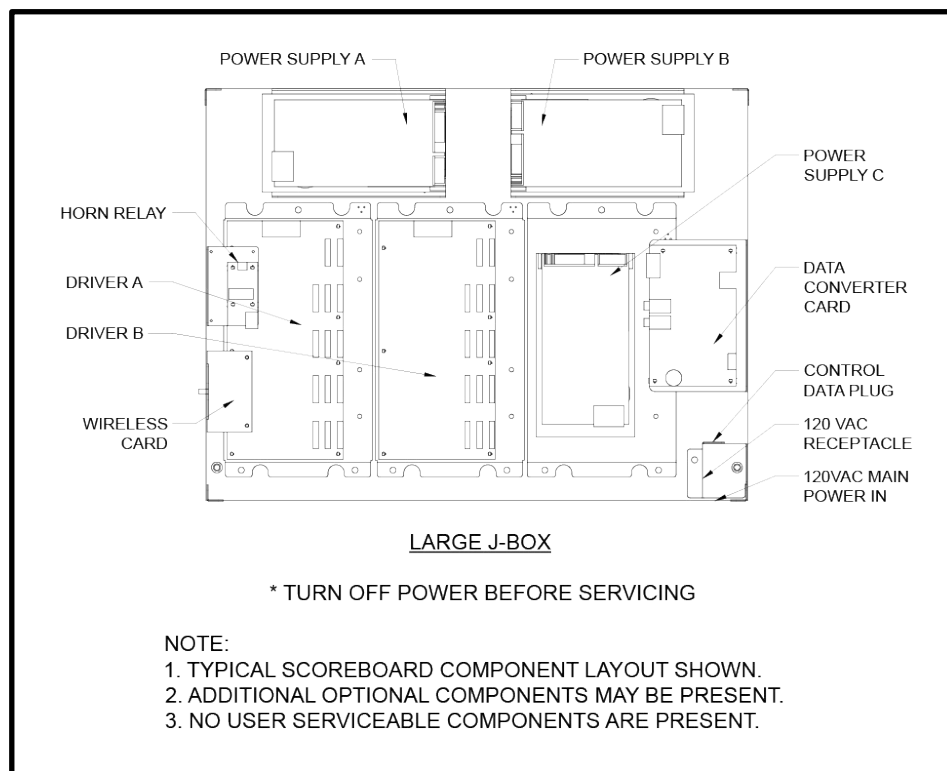 


Figure 2 — Typical component layout behind the access door

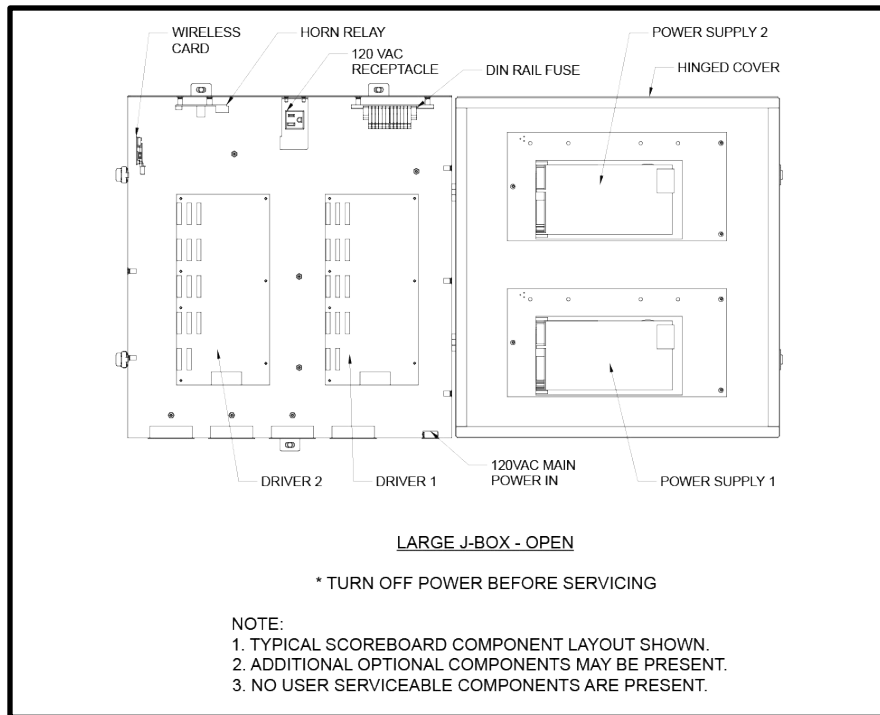 


Figure 2.1 — Large J-Box Open

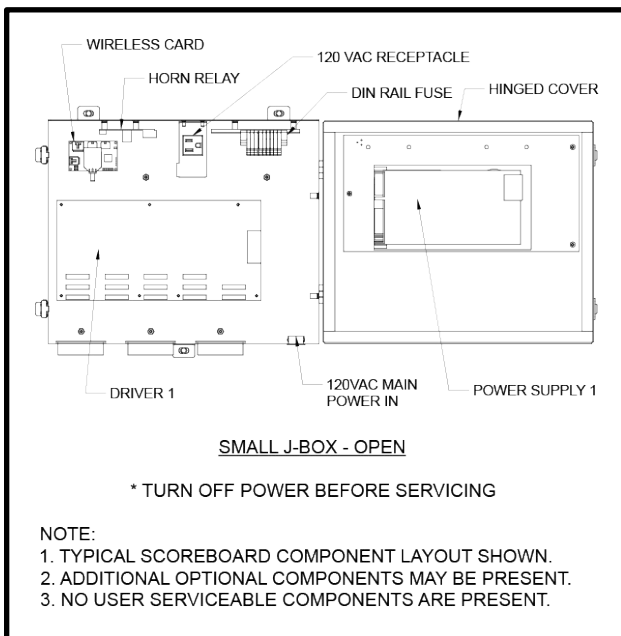 


Figure 2.2 — Small J-Box Open

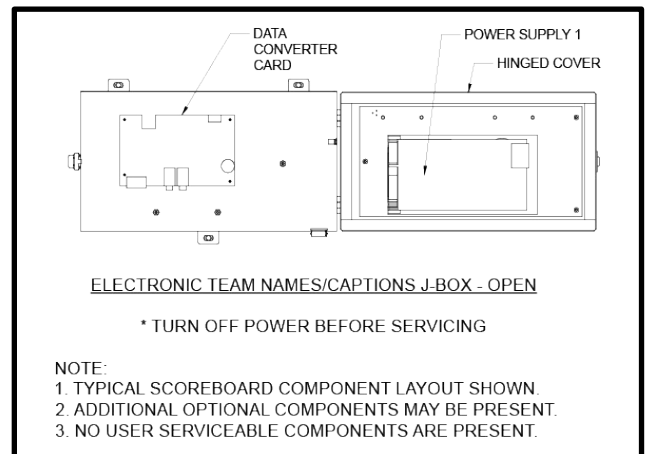 


Figure 2.3 — Electronic Team Names/Captions J-box Open

TABLE OF CONTENTS

POWERING UP THE SCOREBOARD	1
TURN ON SCOREBOARD	1
TURN ON CONTROL.....	1
TURN OFF POWER	1
SCOREBOARD CARE.....	2
OFF SEASON.....	2
PRE-SEASON	2
TROUBLESHOOTING	3
SCOREBOARD MODELS	4
BASEBALL.....	4
7 FT WIDE BASEBALL.....	4
9 FT WIDE BASEBALL.....	5
14 FT WIDE BASEBALL.....	5
16 FT WIDE BASEBALL.....	6
18 FT WIDE BASEBALL.....	6
20 FT WIDE BASEBALL.....	7
26-28 FT WIDE BASEBALL	8
36 FT WIDE BASEBALL.....	8
FOOTBALL.....	9
14 FT WIDE FOOTBALL	9
18 FT WIDE FOOTBALL	9
20 FT WIDE FOOTBALL	10
24 FT WIDE FOOTBALL	10
26 FT WIDE FOOTBALL	11
27 FT WIDE FOOTBALL	11
32 FT WIDE FOOTBALL	11
36 FT WIDE FOOTBALL	11
45 FT WIDE FOOTBALL	12
SOCCER	13
14-20 FT WIDE SOCCER	13
24 FT WIDE SOCCER	13
MULTI-PURPOSE.....	14
9 FT WIDE MULTI-PURPOSE.....	14
14 FT WIDE MULTI-PURPOSE.....	14
14 FT WIDE MULTI-PURPOSE.....	15
16-24 FT WIDE MULTI-PURPOSE	15
4 FT WIDE PORTABLE SCOREBOARD.....	15
HOCKEY.....	16
16 FT WIDE HOCKEY	16
TENNIS	16
9-32 FT WIDE TENNIS.....	16
TRACK & FIELD	17
8 FT WIDE TRACK & FIELD	17
16-18 FT WIDE TRACK & FIELD	18

POWERING UP THE SCOREBOARD

TURN ON SCOREBOARD

Turn ON the scoreboard's main disconnect switch — this is usually mounted near the scoreboard or on one of the support columns.

- **Wired System** — if the scoreboard does not detect a signal from the **control**, then a roving segment will move around the digits of the scoreboard.
- **Wireless System** — if the scoreboard is equipped with a Fair-Play Wireless Gen 2 system and it does not detect a control signal within five (5) seconds after powering up, then it will display its receiver's operating channel for 30 minutes.

If after 30 minutes and the scoreboard still is not receiving any signal, the channel number will disappear and a roving segment will move around the digits of the scoreboard.

TURN ON CONTROL

Fair-Play provides various types of **controls** that are compatible with your scoreboard. When the scoreboard is properly receiving data from the **control**, the scoring data (time, score, fouls, etc.) appears on the scoreboard. **Please refer to your control user guide for additional information.**

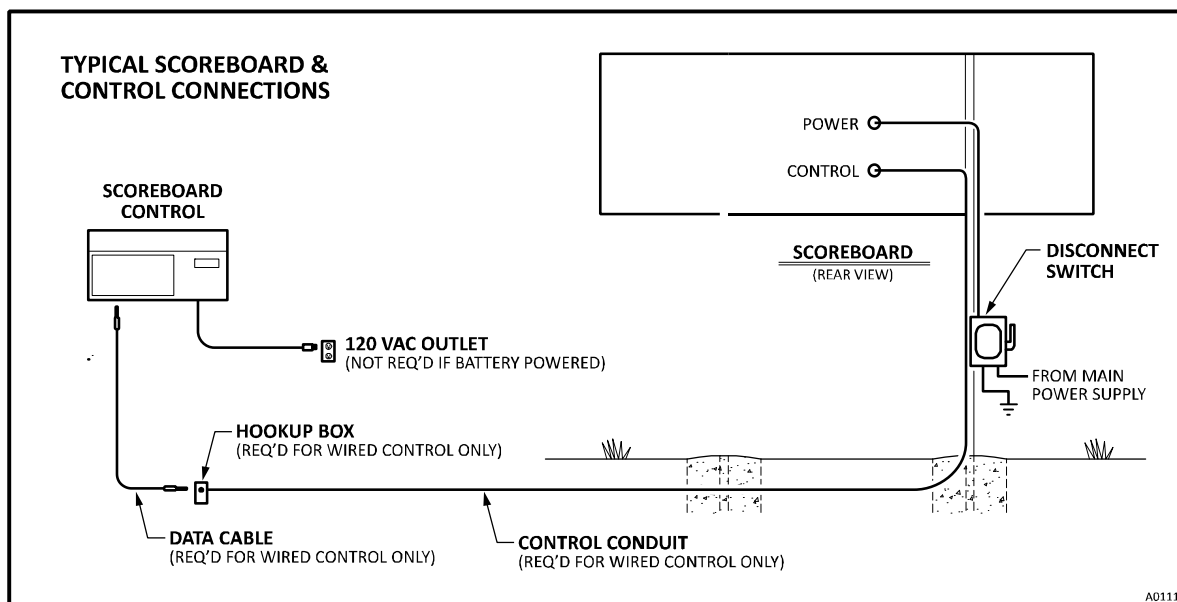 


Figure 6 — Typical Scoreboard & Control Connections

TURN OFF POWER

Turn OFF power to the scoreboard and **control** when the games are over or when the scoreboard is not in use.

- Turn OFF the scoreboard's main disconnect switch
- To prevent possible damage to the **control** from lightning strikes or power surges:
 - Turn OFF **control** power.
 - Unplug the **control's** power cable from the wall outlet.
 - Unplug the **control's** data cable from the hookup box.
 - Store the **control** in a safe and dry location to prevent possible theft or damage.
- Refer to **Scoreboard Care** for additional information.

SCOREBOARD CARE

Your Fair-Play scoreboard, when installed as directed by the installation instructions, is designed and constructed to withstand normal environmental conditions. Because of its seasonal usage, particularly for outdoor football and baseball scoreboards, long life with minimum service can be expected by caring for the scoreboard during the off-season.

CAUTION:

- *Disconnect power before servicing.*
- *Follow safety precautions.*

OFF SEASON

- Turn power OFF.
- Portable scoreboards can be disconnected and removed from their supports and stored in an indoor location.
- The **control** must be unplugged, placed in its carrying case, and stored in a dry location of moderate temperatures.

PRE-SEASON

- As a precautionary measure, the scoreboard should be inspected, reassembled, and tested 6 to 8 weeks in advance of the game season.
- To ensure that the LEDs are operating at optimum brightness, remove any accumulated dirt and debris from the scoreboard by washing the exterior of the scoreboard with a highly diluted dish soap solution and a soft-bristled brush. Rinse gently with tap water using a garden hose spray nozzle.

CAUTION

- *Do not use a high-pressure sprayer.*

TROUBLESHOOTING


PROBLEM:	SOLUTION:
<p>Scoreboard does not light or function.</p>	<ul style="list-style-type: none"> • Verify that the disconnect switch or breaker for the scoreboard's is ON. • If the disconnect switch is ON and there is power to the disconnect switch and scoreboard does not work — call an electrician.
<p>Scoreboard keeps showing a roving segment on each the LED digits.</p>	<ul style="list-style-type: none"> • Verify that the control is turned ON. • Verify that the short data cable is connected from the control to the hookup box. • Wireless system only — verify that the both scoreboard and control are operating on the same channel. Refer to the control user manual for additional information. • Verify that the control is programmed for the correct sport and scoreboard type. Refer to the control user manual for additional information. • Contact your authorized Fair-Play dealer, service representative, or Fair-Play Help Desk.
<p>Random LEDs, scoreboard not functioning correctly.</p>	<ul style="list-style-type: none"> • Verify that the control is operating properly. <ul style="list-style-type: none"> ○ Check power at the control. ○ Check data cable — cable, plug and connectors. ○ Verify that the control is programmed for the correct sport or scoreboard type. ○ Refer to the control user manual for additional information. • Plug the control directly into the data-in box inside the scoreboard. If the scoreboard runs, call electrician to repair or replace the data cable from the scoreboard to the hookup box. • Contact your authorized Fair-Play dealer, service representative, or Fair-Play Help Desk.
<p>Miscellaneous LEDs not lighting or staying lit all the time.</p>	<ul style="list-style-type: none"> • Contact your authorized Fair-Play dealer, service representative, or Fair-Play Help Desk.

SCOREBOARD MODELS


The illustrations in this chapter are provided to help identify the model of your scoreboard.

BASEBALL

 7 FT WIDE BASEBALL

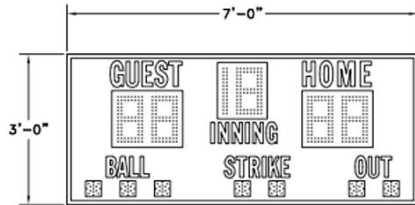


BA-7107-2

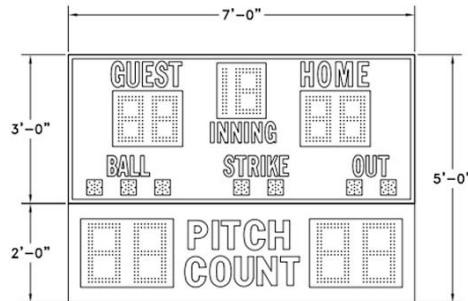 


BA-7107PC-2

 
9 FT WIDE BASEBALL

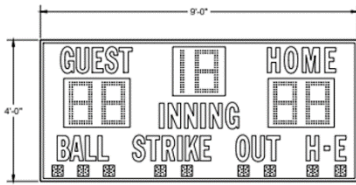


BA-7109-2

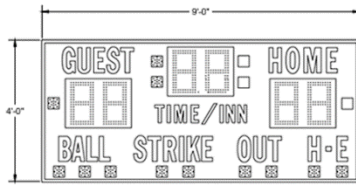 


BA-7109CL-2

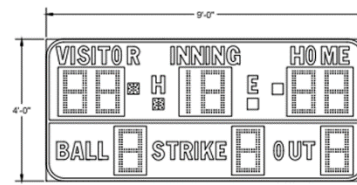 


BA-7209-2

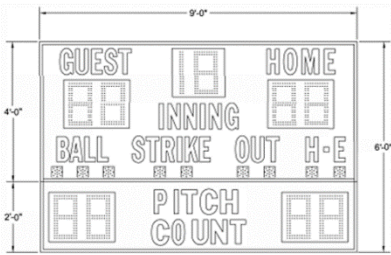 


BA-7109PC-2

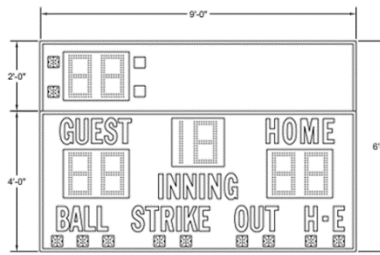 


BA-7109T-2

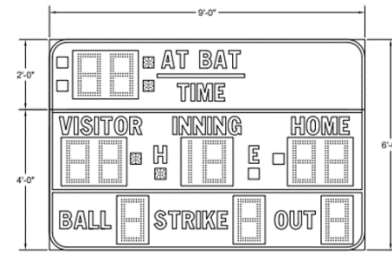 

BA-7209MP-2

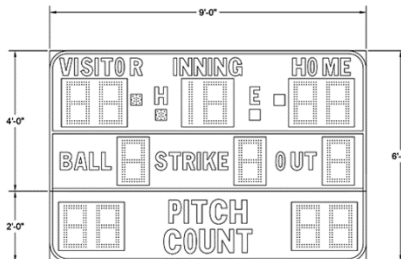 


BA-7209PC-2

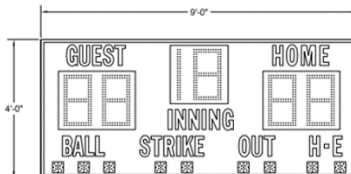 


BA-7309-2

A0124

 
14 FT WIDE BASEBALL

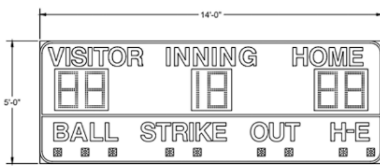


BA-7100-2

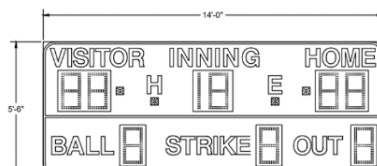 


BA-7200-2

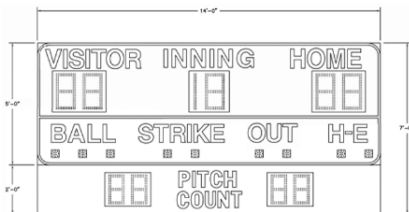 

BA-7100PC-2

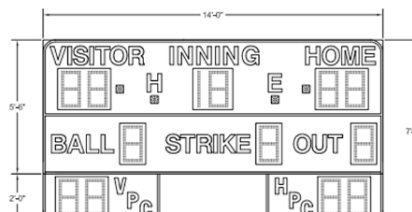 


BA-7200PC-2

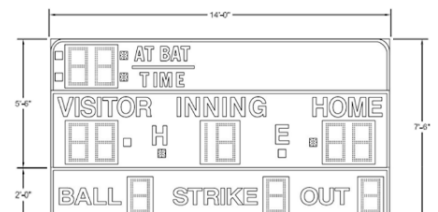 


BA-7200MP-2

A0125

 
16 FT WIDE BASEBALL

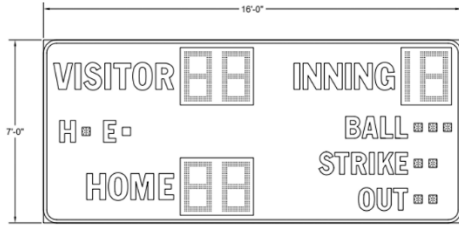


BA-7116-2

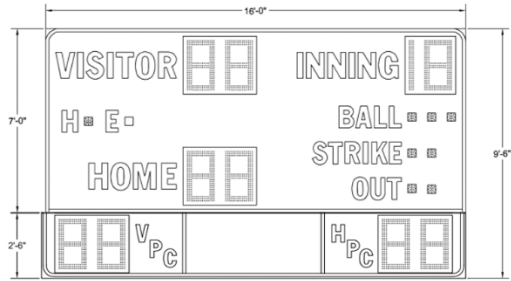 

BA-7116PC-2

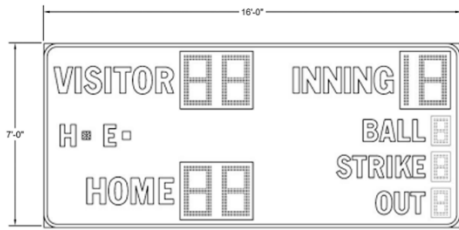 


BA-7216-2

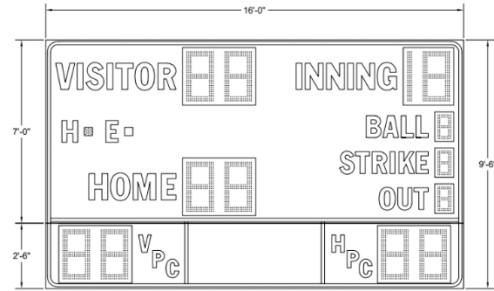 


BA-7216PC-2

 
18 FT WIDE BASEBALL

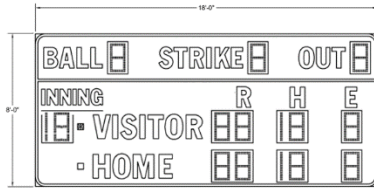


BA-7118-2

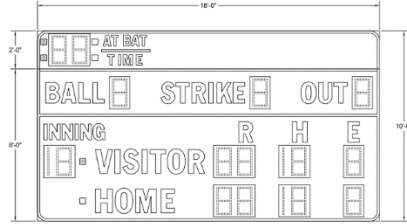 


BA-7118MP-2

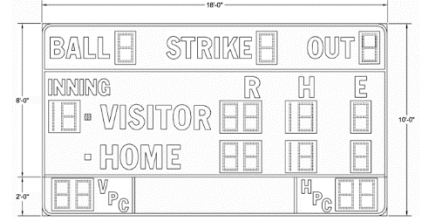 


BA-7118PC-2

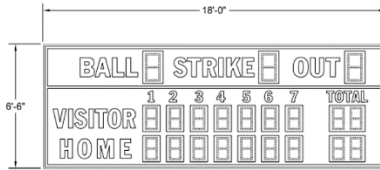 

BA-7218-2

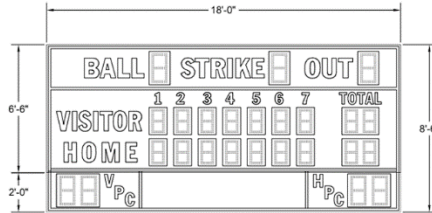 


BA-7218PC-2

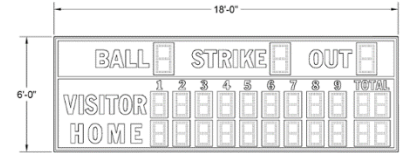 


BA-2075-2

 
20 FT WIDE BASEBALL

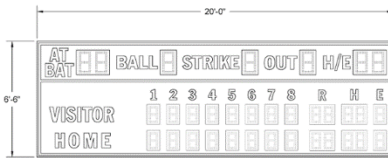


BA-1909-2

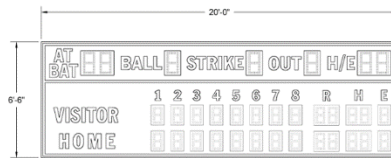 


BA-7120-2

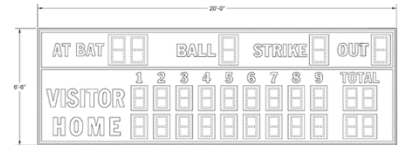 


BA-7120AB-2

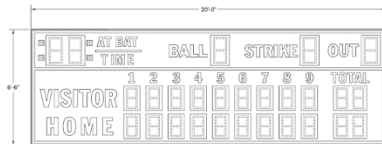 


BA-7120MP-2

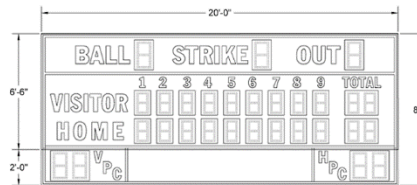 


BA-7120PC-2

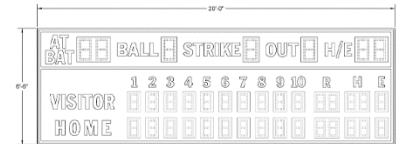 


BA-7220-2

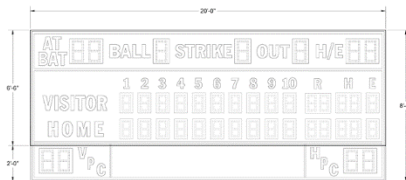 


BA-7220PC-2

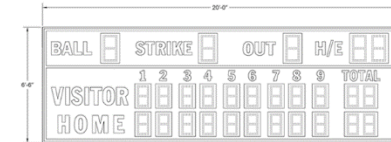 


BA-7320-2

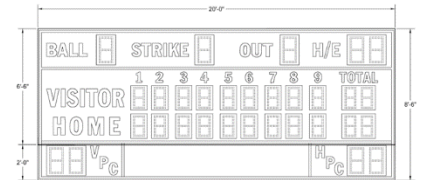 

BA-7320PC-2

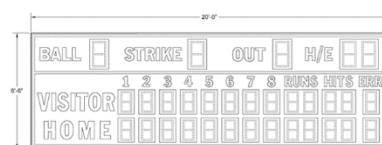 


BA-7420-2

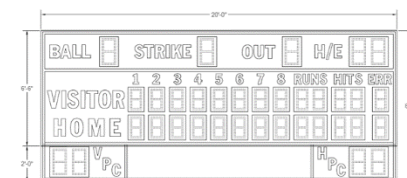 


BA-7420PC-2

 
26-28 FT WIDE BASEBALL

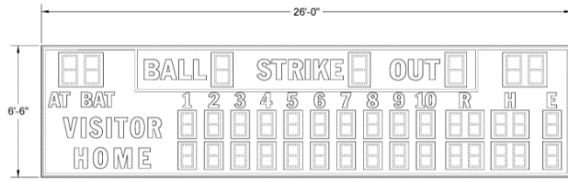


BA-7126-2

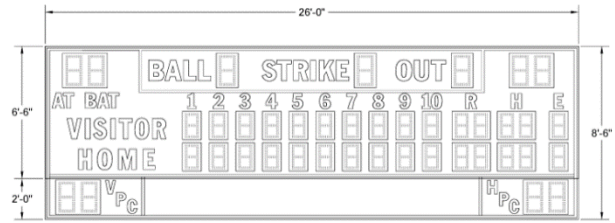 


BA-7126PC-2

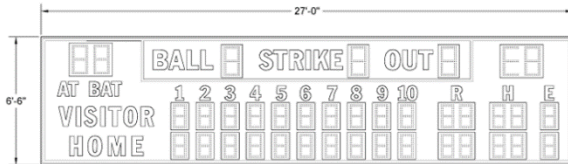 


BA-7127-2

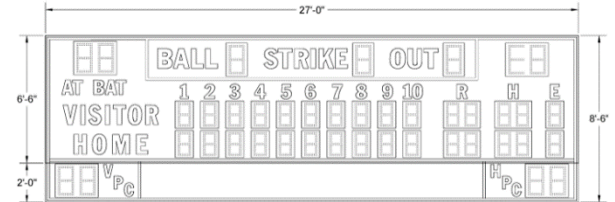 


BA-7127PC-2

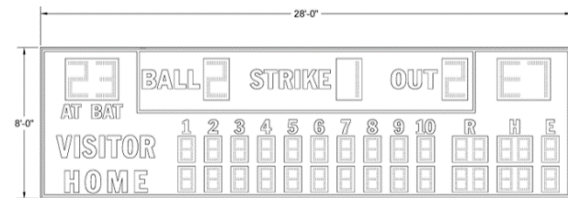 


BA-7128-2

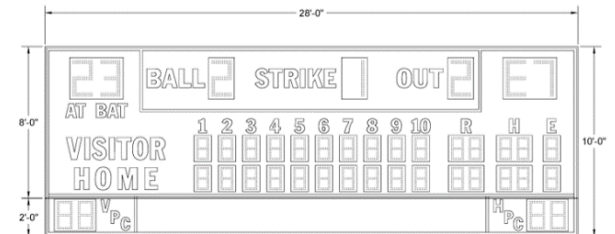 

BA-7128PC-2

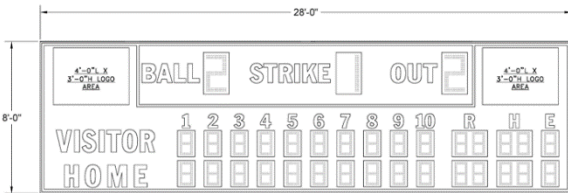 


BA-7228-2

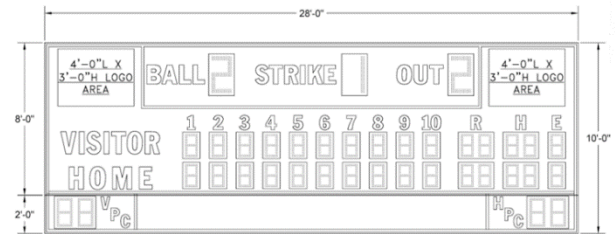 


BA-7228PC-2

 36 Ft WIDE BASEBALL

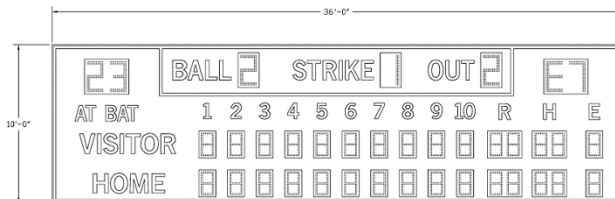


BA-7136-2

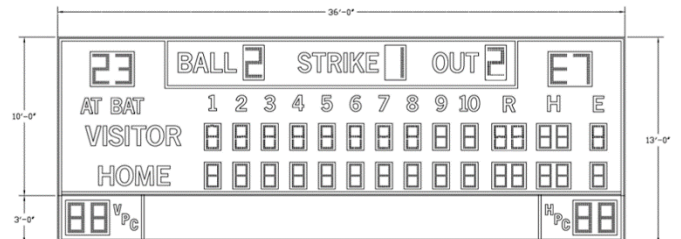 

BA-7136PC-2


FOOTBALL

 14 Ft WIDE FOOTBALL

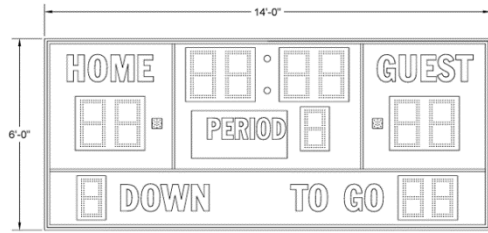


FB-8114-2

 
18 Ft WIDE FOOTBALL

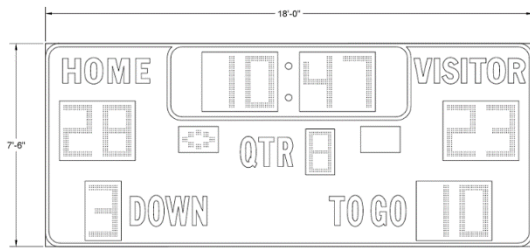


FB-8218-2

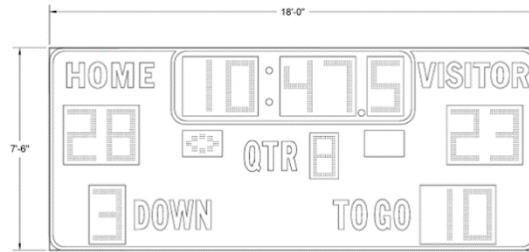 


FB-8218TK-2

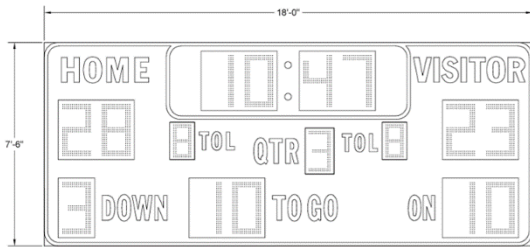 

FB-8318-2

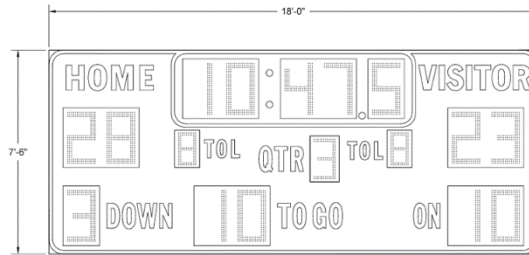 


FB-8318TK-2

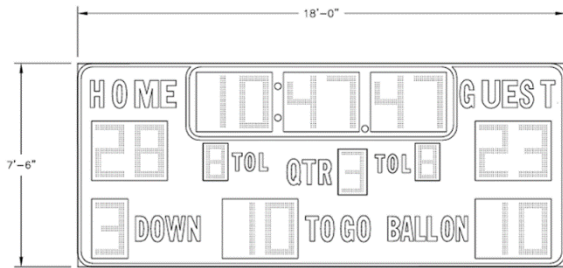 


FB-8318TKH-2

 
20 FT WIDE FOOTBALL

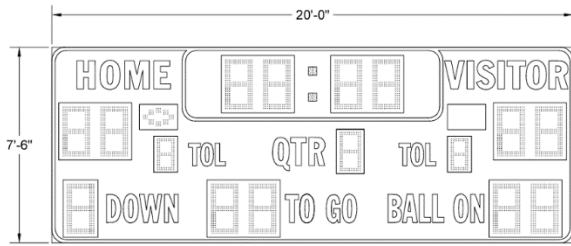


FB-8120-2

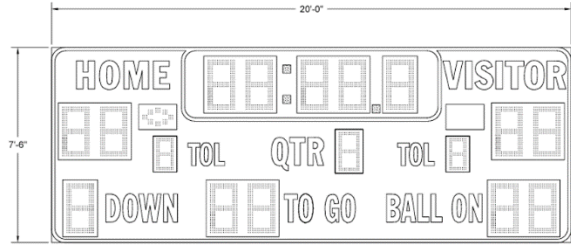 

FB-8120TK-2

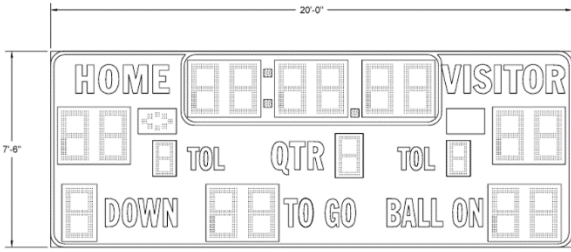 


FB-8120TKH-2

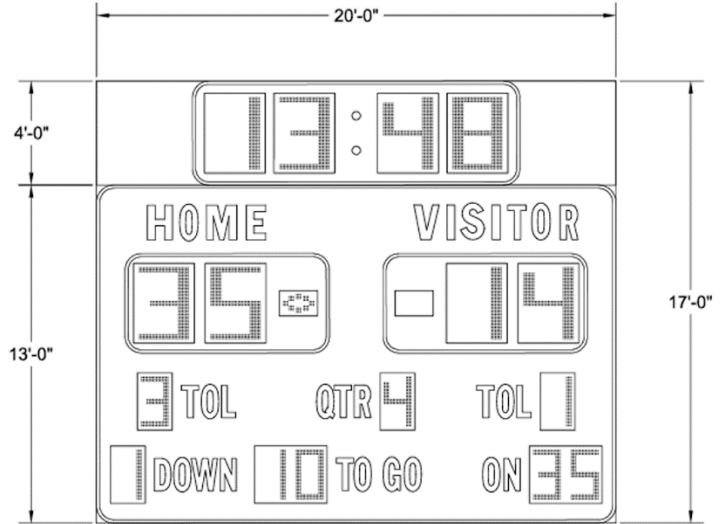 


FB-8165-2

 24 FT WIDE FOOTBALL

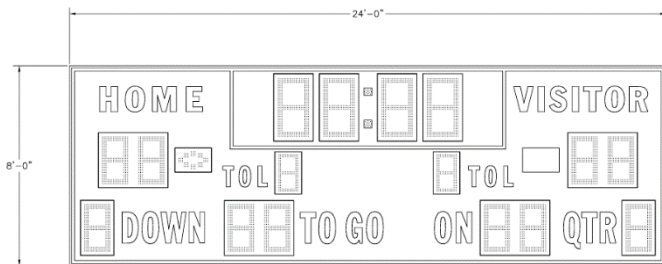


FB-8124-2

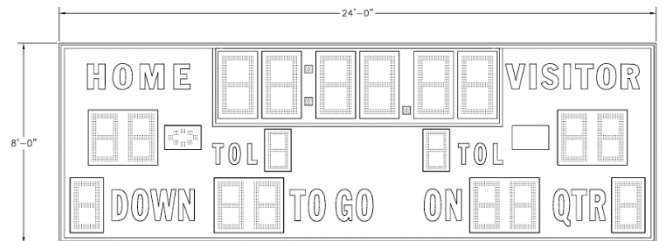 


FB-8124TKH-2

 
26 Ft Wide Football

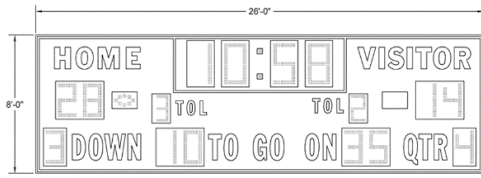


FB-8126-2

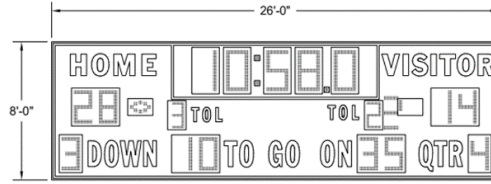 

FB-8126TK-2

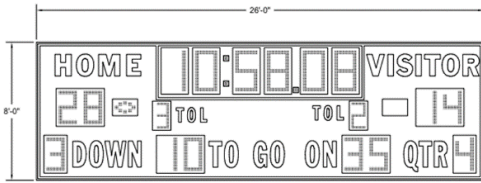 


FB-8126TKH-2

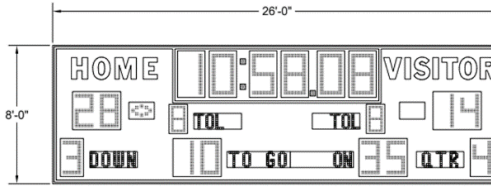 


FB-8626TKH-2

 
27 Ft Wide Football

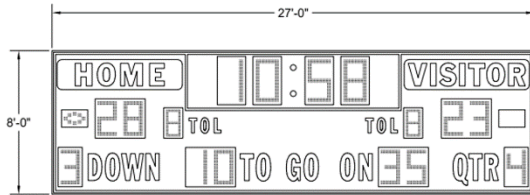

FB-8127-2

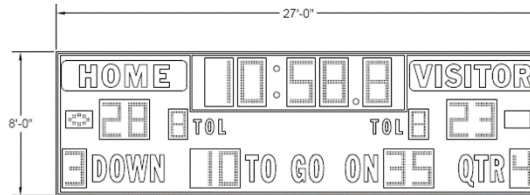 


FB-8127TK-2

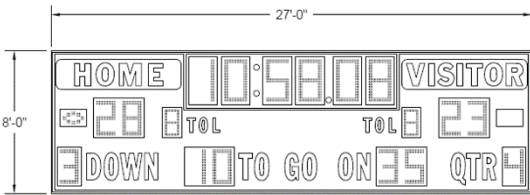 


FB-8127TKH-2

 
32 Ft Wide Football

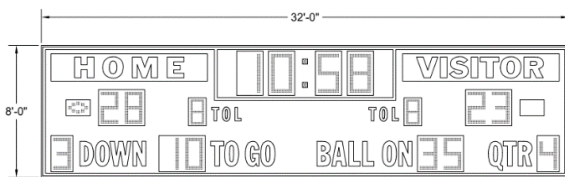

FB-8132-2

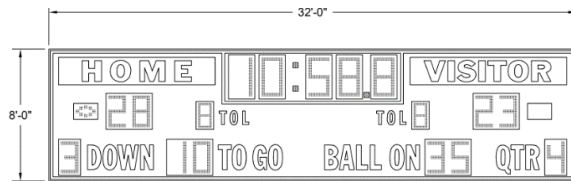 


FB-8132TK-2

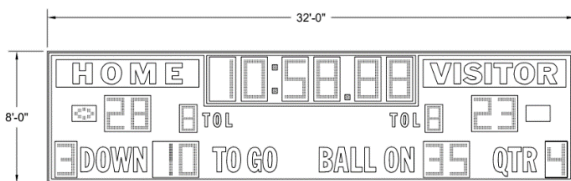 


FB-8132TKH-2

 
36 Ft Wide FOOTBALL

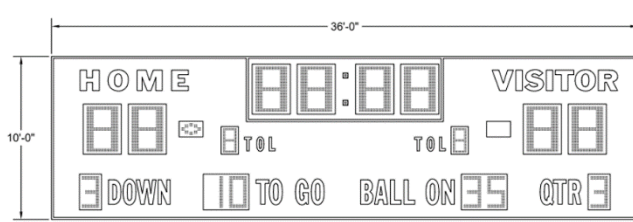

FB-8136-2

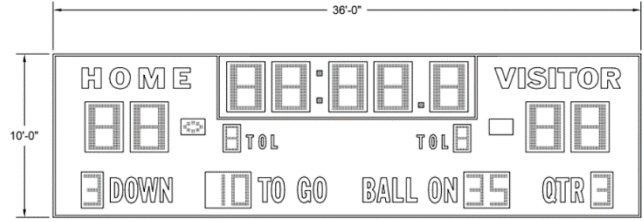 


FB-8136TK-2

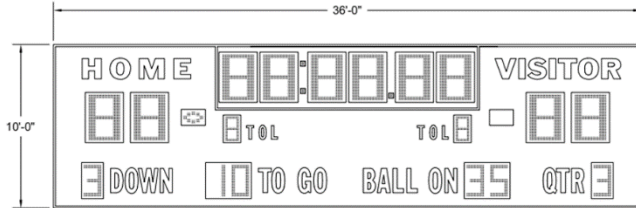 

FB-8136TKH-2

 
45 Ft Wide FOOTBALL

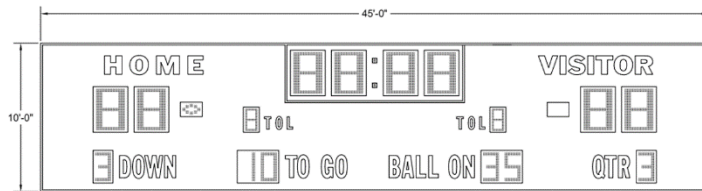


FB-8145-2

SOCCER

 
14-20 FT WIDE SOCCER

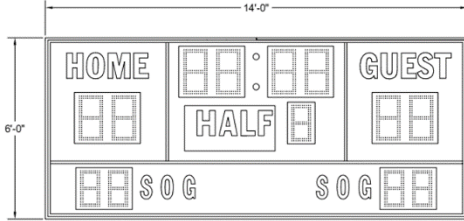


SC-8114-2

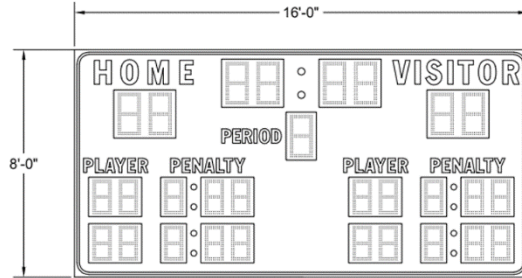 

SC-1768-2

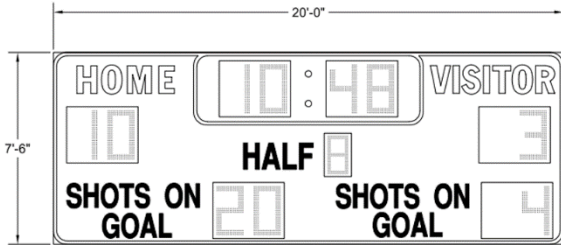 


SC-8120-2

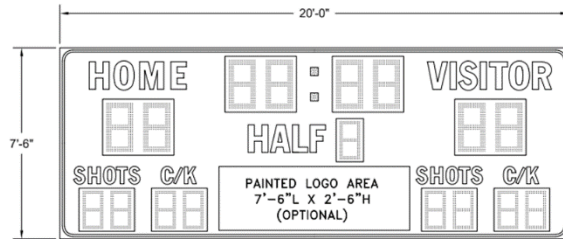 


SC-8220-2

 
24 FT WIDE SOCCER

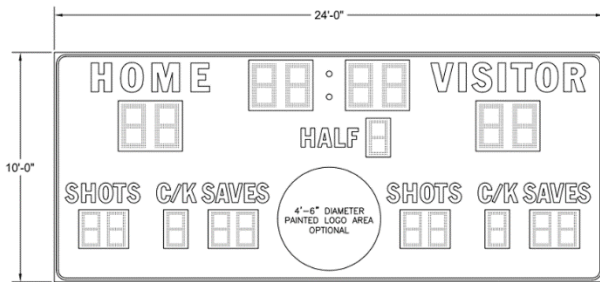

SC-8124-2

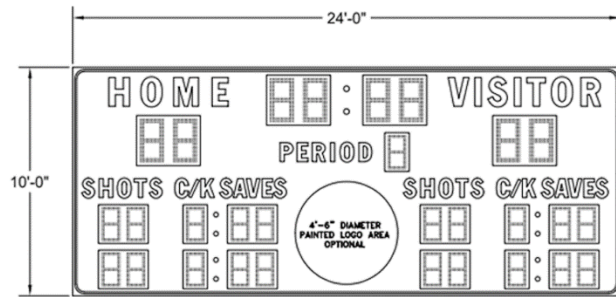 


SC-8124LA-2 - SOCCER

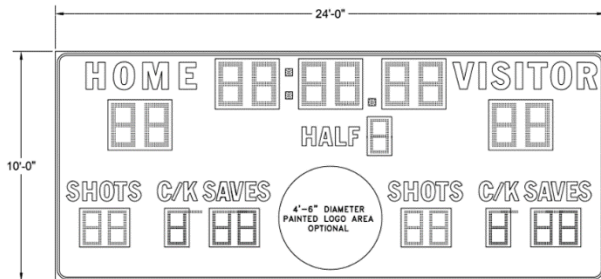 


SC-8124TKH-2

MULTI-PURPOSE

 
9 FT WIDE MULTI-PURPOSE

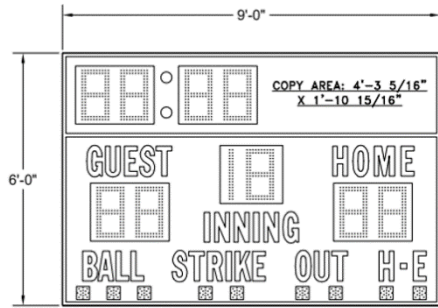


MP-7109T4-2 - BASEBALL

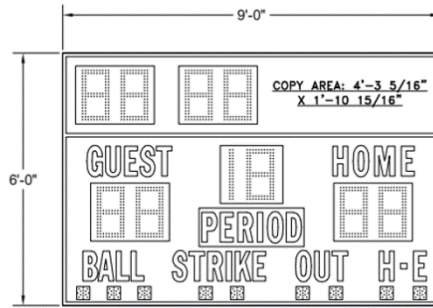 

MP-7109T4-2 - FOOTBALL/SOCCER

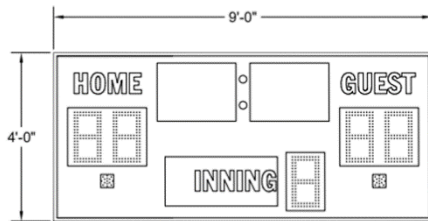 


MP-8109-2 - BASEBALL

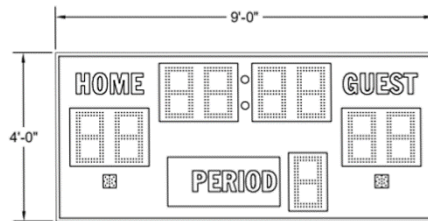 


MP-8109-2 - FOOTBALL/SOCCER

 
14 FT WIDE MULTI-PURPOSE

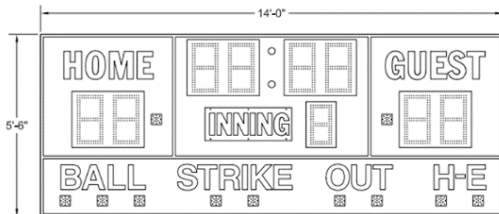


MP-7114-2 - BASEBALL

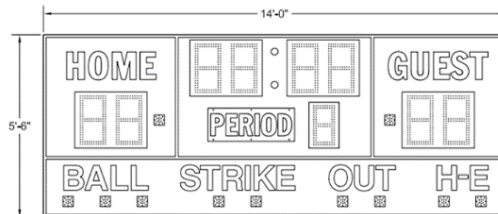 

MP-7114-2 - FOOTBALL

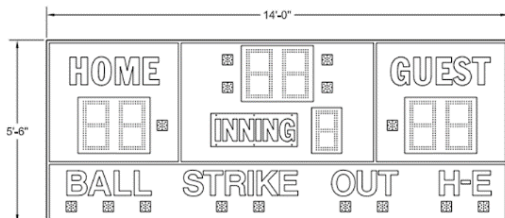 


MP-7114J-2 - BASEBALL

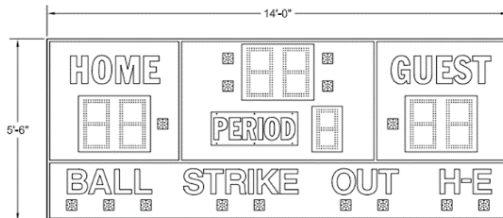 


MP-7114J-2 - FOOTBALL

 
14 FT WIDE MULTI-PURPOSE

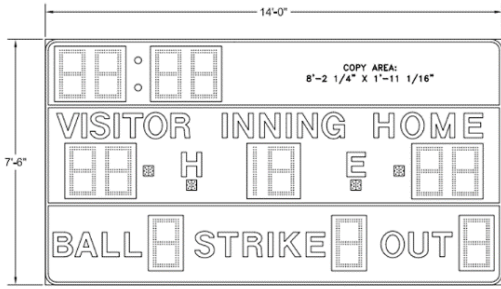


MP-7200-2

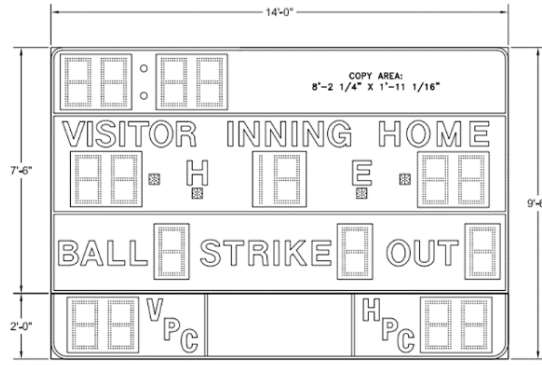 

MP-7200PC-2

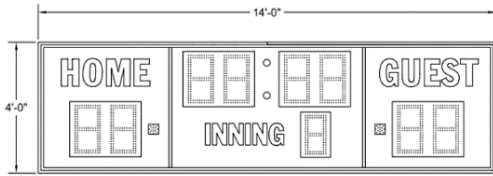 


MP-8114-2 - BASEBALL

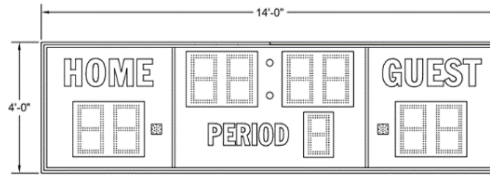 


MP-8114-2 - FOOTBALL

 16-24 FT WIDE MULTI-PURPOSE

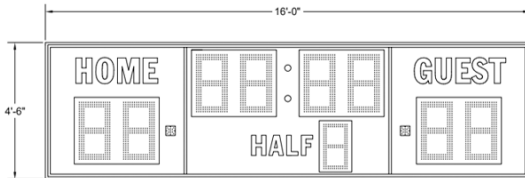


MP-8116-2

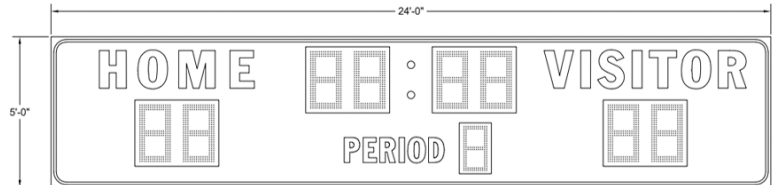 

MP-8124-2

 
4 FT WIDE PORTABLE SCOREBOARD

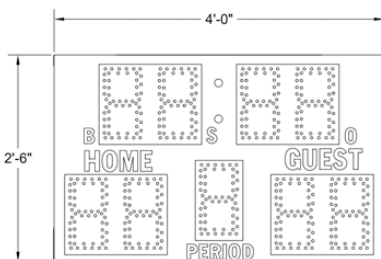

PSO-6900-2

HOCKEY

 
16 Ft Wide Hockey

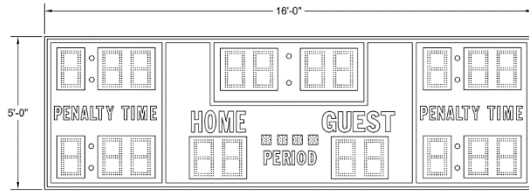


HK-8216-2

TENNIS

 
9-32 Ft Wide Tennis

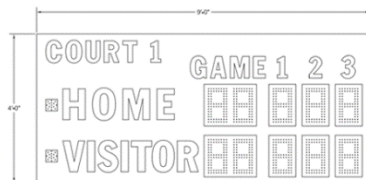


TN-2124-2

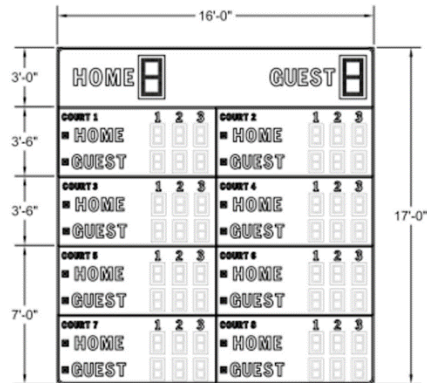 

TN-1724-2

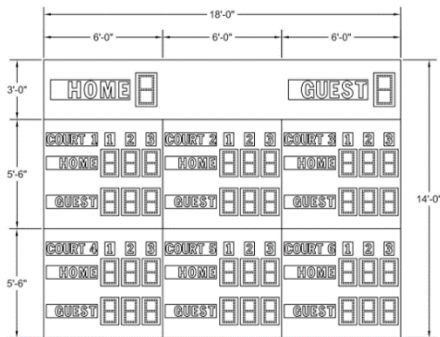 


TN-1736-2

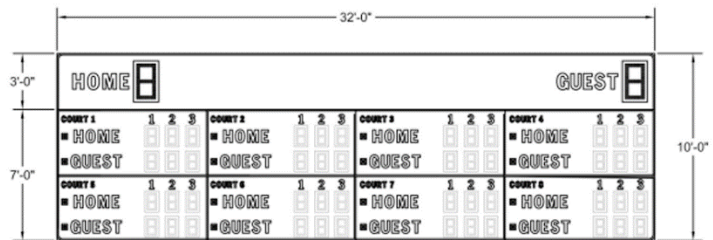 


TN-1715-2

TRACK & FIELD

 
8 FT WIDE TRACK & FIELD

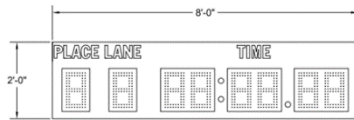


TK-1501-2

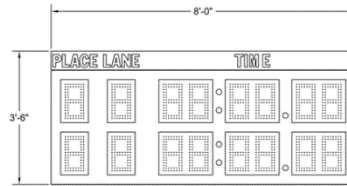 


TK-1502-V-2

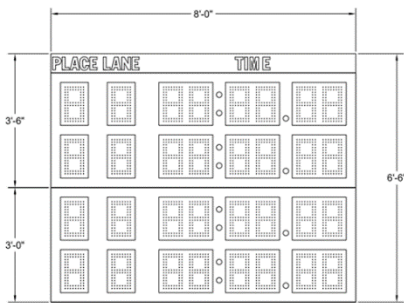 

TK-1504-V-2

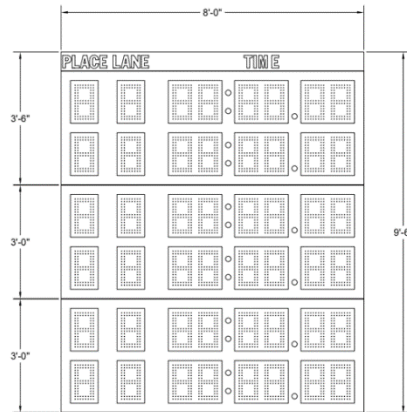 


TK-1506-V-2

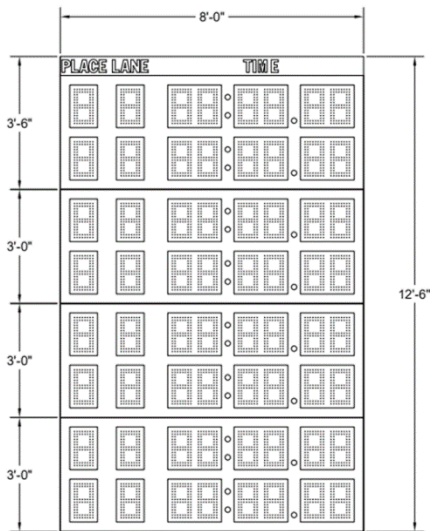 


TK-1508-V-2

 
16-18 FT WIDE TRACK & FIELD

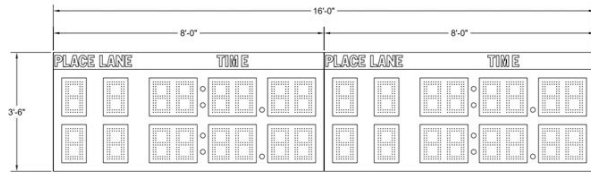

TK-1504-2

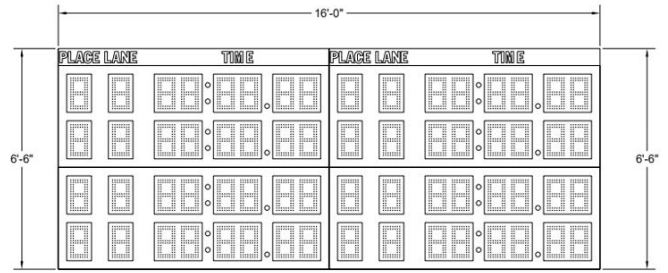 

TK-1508-2

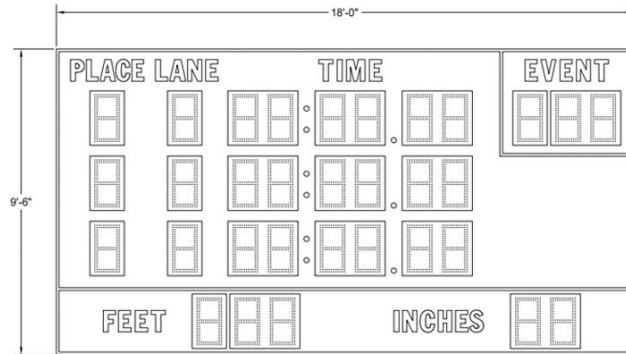 

TK-8918-2

NOTES